


# INSTRUCTIONS FOR USE

and fitting

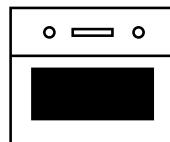

EN

B6550.0  
BP6550.0  
BP6570.0  
CBP6550.0

A close-up photograph of the Küppersbusch logo. The logo is embossed or printed on a dark, possibly metallic, surface. The text 'Küppersbusch' is written in a clean, sans-serif font.

Please read the users instructions carefully before installation of the appliance and before starting to use it.  
Please, store these instructions carefully.

## Service and Customer Service

Phone: 0209;401/ 631

Email: [kundendienst@kueppersbusch.de](mailto:kundendienst@kueppersbusch.de)

**Küppersbusch**  
FÜR KÜCHEN MIT STIL

## Contents

|  |           |
|--|-----------|
| <b>1. Explanation for symbols and indications</b>                                | <b>6</b>  |
| <b>2. Safety Instructions and Warnings</b>                                       | <b>8</b>  |
| 2.1. For connection and operation  | 8         |
| 2.2. Switching On and Operating  | 8         |
| 2.3. Oven  | 9         |
| 2.4. For persons   | 10        |
| 2.5. Before using the first time   | 10        |
| 2.6. Environmental Protection  | 11        |
| 2.7. Energy information  | 11        |
| 2.8. Intended purpose  | 12        |
| <b>3. Safety Instructions Microwaves</b>   | <b>13</b> |
| 3.1. For all surfaces  | 13        |
| 3.2. Cleaning the oven door  | 15        |
| 3.3. Pyrolytic self-cleaning of the oven   | 16        |
| <b>4. Before using the first time</b>  | <b>17</b> |
| 4.1. Important instructions  | 17        |
| <b>5. Accessories</b>  | <b>18</b> |
| 5.1. Glide-out shelves with folding clip   | 19        |
| 5.2. Glide-out shelves with direct clip  | 19        |
| 5.3. Cleaning the oven accessories   | 20        |
| <b>6. Maintenance work</b>   | <b>20</b> |
| 6.1. Replacing the oven lamp   | 20        |
| 6.2. Removing the oven door  | 22        |
| 6.3. Dismantling/assembling the interior glass of the door                       | 24        |
| 6.4. Dismantling/assembling the shelf runners                                    | 26        |
| 6.5. Dismantling the rear wall   | 27        |
| <b>7. Overview of your oven</b>  | <b>28</b> |
| 7.1. Control panel - sensor keys and displays                                    | 29        |
| 7.2. Setting the clock   | 30        |
| <b>8. Roasting and baking charts</b>   | <b>32</b> |
| 8.1. Guidelines for baking   | 32        |
| 8.2. Guidelines for roasting   | 34        |
| 8.3. Guidelines for grilling   | 36        |
| 8.4. Recommended food probe temperatures   | 38        |
| 8.5. Low-temperature cooking guidelines  | 40        |
| <b>9. Oven functions</b>   | <b>41</b> |
| 9.1. Cooking functions   | 41        |
| 9.2. Special functions   | 43        |
| <b>10. Operating the oven</b>  | <b>45</b> |
| 10.1. Turning the oven on and off  | 45        |
| 10.2. Sleep Mode   | 45        |
| 10.3. Putting the appliance into operation for the first time                    | 45        |
| 10.4. Selecting a cooking function   | 47        |
| 10.5. Selecting a special function   | 48        |
| 10.6. Changing a setting during the cooking process                              | 48        |
| 10.7. Automatic programme  | 49        |
| 10.8. Changing weight and temperature  | 50        |
| 10.9. Time settings  | 52        |
| 10.10. Rapid heating   | 57        |
| <b>11. Favourites</b>  | <b>58</b> |
| 11.1. Calling up a favourite   | 58        |
| 11.2. Saving favourites  | 58        |
| 11.3. Deleting favourites  | 59        |
| <b>12. Other functions</b>   | <b>59</b> |
| 12.1. Setting the demo mode  | 59        |
| 12.2. Childproof lock  | 59        |
| 12.3. Factory settings   | 60        |
| 12.4. Automatic confirmation   | 60        |
| 12.5. ECO mode   | 61        |
| 12.6. Start-up tone settings   | 61        |
| 12.7. Unit settings  | 62        |
| <b>13. Roasting thermometer</b>  | <b>62</b> |
| 13.1. Roast thermometer for cooking functions                                    | 63        |
| 13.2. Roast thermometer for automatic programmes                                 | 64        |
| <b>14. Model-specific special settings and additional settings and functions</b> | <b>65</b> |
| 14.1. Pyrolytic function   | 65        |
| <b>15. What to do if</b>   | <b>66</b> |

---

## **Küppersbusch Customer Service Germany**

Küppersbusch Hausgeräte GmbH  
Küppersbuschstraße 16  
45883 Gelsenkirchen

Phone: +49-209401-631  
Fax: (02 09) 401-714 / -715  
Internet: [www.kueppersbusch.de](http://www.kueppersbusch.de)

We are available as follows:

Monday to Thursday from 8.30 a.m. – 6 p.m.  
Friday from 8.30 a.m. – 5 p.m.

Please inform us by fax or internet of your requirements outside of these official hours at [www.kueppersbusch.de](http://www.kueppersbusch.de).

## **Austria:**

Teka Austria GmbH  
Eitnergasse 13  
1230 Vienna

Phone: +43 1 8 66 80-15  
Fax: +43 1 8 66 80-50  
Internet: [www.kueppersbusch.at](http://www.kueppersbusch.at)

We are available as follows:

Monday to Thursday from 8.00 a.m. to 5.00 p.m.

Please inform us by fax or internet of your requirements outside of these official hours at [www.kueppersbusch.at](http://www.kueppersbusch.at)

1. Please note:  
We require the following details for your request for customer service so that our customer service technicians can be well-prepared for carrying out any repairs and have the required spare parts available:
2. Your exact address
3. Your telephone number and, if available, your fax number
4. When can customer service call?
5. An exact appliance designation: Model number and production number (F-No.) (refer to the nameplate and/or the receipt)
6. The date of purchase or delivery
7. An exact description of the problem or what kind of service you require. Please have your receipt available. This will help us to avoid wasting time as well as cutting down on expenses and we will be able to work more efficiently for you.

---

## *Copyright*

This documentation is protected by copyright. Any rights duly derived, in particular those concerning its translation or reproduction, the extraction of images, radio broadcasts, photomechanical or similar reproduction and its storage in data processing systems, shall be reserved even in the event of being only partially used.

KÜPPERSBUSCH makes no representations or warranties with respect to the contents of these operating instructions and explicitly declines to assume responsibility for any implicit claims for defects.

KÜPPERSBUSCH furthermore reserves the right to update this publication and make amendments without entering into a commitment to inform each person of these amendments.

## *Amendments*

Texts, images and data comply with the technical standard of the oven at the time of these operating instructions going to press. We reserve the right to make amendments in line with its further development.

## *Completeness*

This document has altogether 74 pages. Your document is complete if all the pages you have are numbered consecutively.

## *Software*

Please note that these instructions apply for various series of equipment. Details that possibly do not apply for your appliance may be described.

## *Availability of the instructions*

The operating instructions must be permanently at the disposal of the user in order to ensure reliable use. The instructions are to be stored in an easily accessible place at which they can be viewed at any time.

---

## *Dear new K pperbusch appliance user...*

Don't worry, it's not going to be that complicated. We have made every effort structure this information briefly and succinctly, clearly and explicitly, and above all, logically.

In addition to the instructions given by our Customer Service, these instructions aim at enabling you to be able to operate this appliance quickly.

The individual sections classify the instructions in individual topics to give you a better overview and faster access. Please read the information in these instructions carefully before you use your oven for the first time. You will find important guidelines about safety and information about the use, care and maintenance of your appliance to ensure that it provides you with many years of service.

### **The purpose of these operation instructions**

When you use the appliance for the first time, the instructions will take you step-by-step through the individual functions, applications and operation stages.

The section on **"Safety Instructions and Warnings"** gives you important information on your safety and on the use, care and maintenance of your appliance and its attachments, and it informs you about potential danger.

The section on **"Operation Instructions"** introduces you to the appliance, tells you what it's for, what it can do and how it works, shows you how to set it up and shows you the menu guide.

The section on **"What to do if..?"** is for finding faults - just in case. You will find useful information on faults and errors.

Once you have had some time to become familiar with the appliance, you can look up specific sections or topics if you are in any doubt. Please keep this manual in a safe place. Hand these instructions for use over to any new owner for the purpose of their information and safety.

### 1. Explanation for symbols and indications





---

The appliance was produced according to state of the art technology. Machines nevertheless give rise to risks which cannot be constructively avoided.


In order to guarantee sufficient safety for the use, safety instructions are also given. These instructions are marked by way of the highlighted texts which follow.


Sufficient safety in operation will only be guaranteed when these instructions are observed. The designated text passages have different meanings:


The following danger symbols are used at some points:

|  |  |
|--|--|
|    | <b>DANGER</b><br>Note indicating an imminent threat which may result in death or very serious injury.                |
|    | <b>WARNING</b><br>Note indicating an imminent threat which may result in death or very serious injury.               |
|    | <b>CAUTION</b><br>Note indicating a dangerous situation which may result in minor injury or damage to the appliance. |
|  | <b>HINT</b><br>Note to be observed in order to make handling the appliance easier.                                   |

The following danger symbols are used at some points:

|  |   |
|--|---|
|  | <b>WARNING OF ELECTRICAL ENERGY</b><br><b>RISK OF FATAL INJURY!</b><br>Live components have been installed near this symbol. Covers bearing this sign may only be removed by a certified skilled electrician. |
|--|---|

|   |  |
|---|--|
|  | <p><b>OBSERVE REGULATIONS FOR HANDLING ELECTROSTATICALLY SENSITIVE COMPONENTS AND MODULES (ESDS).</b></p> <p>Electrostatically endangered components and modules are located behind covers bearing the adjacent symbol. Never touch plug connections, strip conductors or component pins. Only qualified staff members who are familiar with ESDs are authorised to carry out any technical intervention work.</p> |
|---|--|


|   |  |
|---|--|
|  | <p><b>HOT SURFACES!</b></p> <p>This symbol has been applied to surfaces which get hot. There is a risk of serious burning or scalding. The surfaces may also be hot after the appliance has been switched off. This symbol warns of a risk of burning.</p> |
|---|--|

## *Check consignment*

Transport the oven to a suitable place and remove it from its packaging there. The oven may only be assembled and installed by an electrician who complies with the respective specifications.

Check to ensure that the consignment is complete.

- Check the oven for any transport damage.
- Contact our Customer Service if the consignment is incomplete or if the oven shows any transport damage.

|  |  |
|--|--|
|  | <p><b>CAUTION!</b></p> <p><b>Never put a damaged appliance into operation!</b></p> |
|--|--|

### *2. Safety Instructions and Warnings*

---

#### *2.1. For connection and operation*

- Only KÜPPERSBUSCH ovens have been manufactured and tested for use under a KÜPPERSBUSCH hob. Do not use other hobs.
- Any handling or repair to the appliance, including replacement of the power cable, should be carried out by authorised Technical Service Personnel using original spare parts. Repairs or handling by others may damage the appliance or cause malfunctioning that could be hazardous to your safety.
- Statutory regulations and the connection specifications issued by the local power supply company must be strictly observed.
- The power supply to the appliance must be disconnected when the oven lamp is connected, repaired or replaced. Disconnect the fuse or pull out the power plug.
- Installation must guarantee full safety against any potential contact.
- Changing the installation location of a plug and replacing the mains cable may only be carried out by an electrician who complies with the respective specifications.
- It is essential for the connection data (frequency and voltage) of the oven to comply with that of the mains electricity supply in order for the oven not to be damaged. Compare this data when connecting the oven. If in any doubt, ask a qualified electrician.
- Multiple sockets and extension cables do not sufficiently guarantee safety (risk of fire). Do not use them to connect the oven to the mains electricity supply.
- Only use the oven when it has been installed in order to guarantee that it functions safely.
- Make sure that no electric cable from a free-standing or built-in appliance makes contact with the oven.

#### *2.2. Switching On and Operating*

- Do not allow children to come near the oven while in use as it can reach very high temperatures.
- Children should be supervised in order to ensure that they do not play with the appliance.



- This appliance is not for use by persons (including children) with reduced physical, sensorial or mental capacity, or those lacking experience and knowledge, except if they have been supervised and instructed regarding use of the device by a person responsible for their safety.
- Touching live connections and modifying the electrical and mechanical construction of the oven will put you at risk and may lead to malfunctioning of the oven. Never open the oven casing.
- The oven must be completely disconnected from the mains electricity supply when installation and maintenance work or repairs are being carried out, e.g. when the lighting inside the oven is defect (see the section on "What to do if...?")  
Make sure of this by
  - switching off the electrical installation fuses or
  - completely screwing out the electrical installation screw fuses or
  - pulling the power plug (if in place) out of the socket.When doing so, do not pull on the mains supply cable, but on the power plug.

### 2.3. *Oven*

- Unplug your oven if it malfunctions.
- If the glass is broken, split or cracked: switch the hob off immediately, disconnect it from the power supply and contact our Customer Service or your specialised dealer.
- Do NOT open the appliance yourself.
- Repairs to appliances must be carried out by qualified technicians.
- The oven must always be operated with the door closed.
- The manufacturer takes no responsibility for any use of the oven other than for the home preparation of food.
- Only use the oven after it has been installed inside the kitchen unit.
- Do not store oil, fats or inflammable materials inside the oven. This may be dangerous if the oven is turned on.
- Do not lean or sit on the open oven door. You could damage it, as well as endangering your safety.
- In order to cook food in the oven, place the tray or grid shelf supplied with it over the shelf runners inside the oven cavity. The tray and grid shelf have a system to make their partial outward movement easy for food handling.

- Do not place containers or food on the bottom surface of the oven. Always use the trays and grid.
- Do not pour water on the bottom surface of the oven when in use; this may damage the enamel.
- Open the oven door as little as possible during cooking. This will reduce power consumption.
- Use protective oven gloves when performing operations inside the oven.
- It is normal for condensation to occur on the oven door when cooking dishes with a high liquid content.
- When the oven is in use, it becomes hot. When the casing heats up, the cooling fan will switch on to cool the casing down. The cooling fan will operate until the casing has cooled down, i.e. also when the appliance has been switched off. The noise made by the fan when it is in operation is normal; it does not indicate any malfunctioning.

### 2.4. For persons

- These appliances may be used by children aged 8 years and over and by persons with physical, sensory or mental impairments or by persons who lack experience and/or know-how, provided they are supervised or have been instructed in the safe use of the appliance and have understood the risks relating to the appliance. Children may not play with the appliance. Cleaning and maintenance by the user may only be carried out by children when they are supervised.
- The surfaces of the heating and cooking zones become hot during use. Keep small children away at all times.

### 2.5. Before using the first time

- Remove packaging.
- Be certain your appliance is properly installed and grounded by qualified technician. The manufacturer cannot be held responsible for damages caused by improper installation and electrical connection of this oven. The oven should not be operated until it has been properly installed within cabinetry.
- This appliance may only be used for the standard baking and roasting of food in a household; it is not intended for commercial use.
- The appliance may not be modified.

- Safety is only guaranteed if the appliance is connected to a protective conductor which complies with currently valid regulations.
- The appliance may not be connected to the power supply with an extension cable.
- The appliance may not be installed above a dishwasher or a tumble dryer: the steam released by these appliances may damage the electronic unit.
- Also take note of the instructions on cleaning and care before using your appliance for the first time.

### 2.6. Environmental Protection



- Remove packaging and the old appliance
- Remove packaging and recycle in an environmentally-friendly way.
- In Germany, the transport packaging is returned to the store where the appliance has been purchased. By returning the packaging material, raw materials are saved and also fewer waste products are generated. Old appliances still contain valuable material. Leave your old appliance at a collection point for valuable materials. Old appliances must be rendered inoperative before disposing of them in order to prevent improper use.

### 2.7. Energy information

Tested to comply with the requirements of the 66/2014 (Eco-Design) and 65/2014 (Energy Labelling) regulations in accordance with Regulation EN 60350-1.

Energy consumption measurements taken under different conditions may give different values from those indicated for your oven. Consult the User's guide accompanying this manual to learn about the energy consumption of your oven.

### 2.8. *Intended purpose.*

- This oven is intended for household use and in household-like installation environments.
- This oven is not suitable for outdoor use.
- This oven is only to be used as a domestic household appliance for roasting, baking, grilling, cooking, defrosting, preserving and drying foods. No other type of application is permissible.
- This appliance is not for use by persons (including children) with reduced physical, sensorial or mental capacity, or those lacking experience and knowledge, except if they have been supervised and instructed regarding use of the device by a person responsible for their safety. These persons may only operate the oven unattended if it has been explained to them in such a manner that they are able to operate it safely. They need to recognise and understand the potential risks that operation entails.
- The oven may only be used if it has been installed in a suitable unit. Only use the oven as described in these instructions for use. Any other use is not considered to be intended and may result in damage to material or even injury to persons. The manufacturer cannot be held responsible for damages caused by improper use of this oven.
- The oven is only intended for use in private households. It may not be used for commercial purposes.
- The oven is not suitable for heating a room.
- The lamp in the oven has only been provided for lighting up the interior of the oven; it does not serve as room lighting.
- The oven door may not be used as a support, seat or step.



**The appliance may only be used for its intended purpose!**

### 3. Safety Instructions Microwaves

You should carefully read this chapter before you use your appliance the first time. If cleaned correctly and looked after regularly the appliance will remain beautiful and clean for many years. The following tips will help you to clean and care for your oven's various surfaces gently but thoroughly.

#### 3.1. For all surfaces



#### **DANGER TO LIFE!**

**Do not use steam and/or pressure cleaning devices on the oven! The appliance could become damaged and may create a situation where there is danger of death.**



#### **RISK OF BURNING!**

**Leave the appliance to cool until you can touch it with your hand before cleaning it.**

- Clean the oven each time you use it. Stains or baked-on food that have not been removed may burn the next time the appliance heats up. Often, these types of stains or dirt cannot be removed without leaving marks.
- To clean an oven that is not very dirty, use a damp cloth, a soft brush or a soft sponge and a weak solution of detergent and warm water. Rinse with cold water so that there is no detergent left which might decolour the surface or cause more stains. Dry with a cloth immediately after. Here are some instructions for more difficult-to-remove stains concerning the different surfaces and elements. VSR 0-FIX-C is ideal for cleaning glass-ceramic, enamel and the surface of the inside of the door. This cleaning powder can be purchased from the Küppersbusch Customer service.
- The shelf runners may be removed for cleaning. Reinstall them correctly and never use the oven without the shelf runners installed.
- Clean the outside surfaces of the oven and its accessories with lukewarm soapy water or a mild detergent. Take care with rust-free and varnished surfaces and only use sponges or cloths that do not scratch.



### NEVER CLEAN WITH

- aggressive or bleach-based cleaning agents that contain active oxygen, chlorine or other caustic substances.
- abrasive cleaning or scouring agents, such as steel wool, soap-impregnated steel wool, stiff brushes, metal or plastic sponges or any similar cleaners with an abrasive surface.

### 3.1.1 Removing dried deposits

Thick deposits must be soaked to soften them beforehand. This is best done with a wet cloth. It will then be easier to remove the deposits.

Over time, certain types of food such as tomatoes, vinegar and salt-baked dishes may cause the enamel to change colour. This is normal and does not affect the functioning of the oven. Do not try to remove these stains using aggressive methods such as those described, as this could cause permanent damage to the surface.

#### Using a cleaning scraper



### CAUTION! RISK OF CUTS!

The blade of the cleaning scraper is very sharp!

Always hold the cleaning scraper flat to the surface and push the grease away from you.

Do not scrape with the corners of the cleaning scraper; handle it carefully to ensure that no sealing is damaged.

### 3.1.2 Suggestions on the use of oven sprays

**The manufacturer's instructions must always be observed.**



### CAUTION!

Do not spray into the fan opening on the back. The ökotherm® catalyst will be destroyed if oven spray is used.

Oven sprays will damage aluminium and varnished and plastic surfaces.

For environmental reasons you should not use oven spray at all. If you nevertheless want to use it, only spray it in the oven interior and on enamel baking trays.

#### Chromium-plated oven trimmings

##### Door front and handle with chromium-plated, black trimming

- Limescaling, grease and starch deposits must be removed immediately; stains will result if they are not.

- These models are very sensitive to scratches and oven spray will damage them. Do not use cleaning scrapers, pot scourers or hard-fibre sponges.



Use a cloth or a soft sponge and rinse only with warm water and a little detergent.

## Stainless steel

### Stainless steel door front and control panel



Use a cloth or a soft sponge and rinse only with warm water and a little detergent.



### CAUTION!

**Stainless steel scratches very easily! Do not use a scraper!**

**Limescaling, grease and starch deposits must be removed immediately; stains will result if they are not.**



We recommend that you clean stainless steel surfaces with a standard cleaning agent for stainless steel once a week. This will create a protective film, protecting the stainless steel from becoming discoloured.

## Enamel

### Oven interior, front, baking sheets

It is possible to use plastic sponges with a pot scouring part. However, some products have grit in the pot scouring part and this causes scratching. It is recommended that you test your product at a point that is not clearly visible.



A cleaning scraper is ideal for removing stubborn dirt. We recommend VSR 0-FIX-C for a thorough clean. Oven spray can also be used.

### 3.2. *Cleaning the oven door*

(\*not possible for ovens with a microwave function)

Do not use any metal pot scourers, wire brushes, scouring powder or abrasives to clean the oven door, since this may result in the surface becoming scratched or the glass breaking. Clean the outside of the door and its accessories with lukewarm soapy water or a mild detergent. Corrosion-resistant surfaces must be treated with care. Use only sponges or cloths that do not cause scratching.

### 3.2.1 Door glass

#### Door interior – coated glass



#### CAUTION!

**If possible do not use any oven spray, since its regular use can destroy the coating on the glass.**



A cleaning scraper is ideal for removing stubborn dirt. We recommend VSR 0-FIX-C for a thorough clean.

Remove residual dirt from the oven sealing.

#### Door front, control panel



Use a cloth or a soft sponge and warm water and a little detergent to clean the door front. Glass cleaner may also be used.

### 3.2.2 Door sealing

Clean the sealing regularly to eliminate all traces of fat or food. This will prevent the seal from becoming damaged and breaking during subsequent cooking operations.

It is advisable to clean this sealing without removing it.

## 3.3. Pyrolytic self-cleaning of the oven (depending on the model)

This function involves a pyrolytic cleaning process which applies high temperatures in the oven interior to trigger a process of oxidation and carbonisation process on the grease contamination.

After the pyrolytic cleaning process has been completed, all you need to do is remove the ash generated during the process with a damp cloth. Places in the interior that are difficult to access are cleaned with a non-metallic pot scourer in order not to damage the enamel coating. The oven has 3 pyrolytic programs which run for 60, 90 and 120 minutes respectively. Choose the running time depending on how dirty the interior of the oven is. The dirtier the oven, the longer the program should take. It is not necessary to run the pyrolytic cleaning process every time you use the oven for baking or roasting. We recommend running the pyrolytic program every 4.5 times the oven is used for baking or roasting, depending on how dirty the interior of the oven is. The interior lighting in the oven will remain switched off during a cleaning cycle.









**VERY IMPORTANT!**

**Remove all the accessories and dishes from the oven, including the guide rails for the baking trays and/or the glide-out shelves for the pyrolytic self-cleaning function.**

**Remove food rests and excessive dirt since they may ignite, giving rise to danger during the self-cleaning process.**

## 4. Before using the first time

There may be traces of fat and other substances in the oven as a result of the manufacturing process. Proceed as follows to remove them:

- Remove all the packaging including any protective plastic film that may have been used.
- Connect the oven and allow it to operate using function  /  or  /  at 200 °C for an hour.
- Allow the oven to cool down and open the door. This will ventilate the oven and no smells will remain in the inside.
- Clean the oven and its accessories after it has cooled down.

Smoke and odours will be generated during initial operation, so make sure that the kitchen is well ventilated.

### 4.1. Important instructions


- Do not cover the bottom of the oven with aluminium foil as this may affect cooking performance and damage the enamel inside the oven and the interior of your kitchen unit. Do not pour water on the bottom surface when in use; this may damage the enamel.
- It is normal for condensation to occur on the oven door when cooking dishes with a high liquid content.
- When closing the oven door during cooking, the sound of the air inside it can be heard. This effect is normal due to the pressure exerted by the door when it is closed, guaranteeing the sealing of the cavity
- Do not place containers or food on the bottom surface of the oven. Always use the trays and racks supplied with the oven.
- To prepare yoghurt, place the jars on the oven floor.
- To cook any other food, insert the tray or rack into the runners inside the oven.

## Accessories

---

Between the two rails of the side supports or on any of the extractable runners, if the oven has them.

- Switch off the electrical installation fuses or
- The rack and some of the trays have retention grooves to prevent them from accidentally being removed. Place these grooves towards the back of the oven, facing downwards.
- The surface of the rack on which the container will rest must be below the side rails; This prevents the container from accidentally sliding.
- The trays have a tab at the front to facilitate their removal. Place the tray with the tab facing towards the outside of the oven.

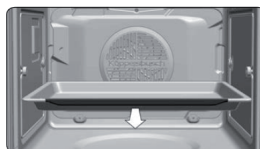

## 5. Accessories

---

Some oven models have a glide-out shelves kit accessory.




### **IMPORTANT!**

**The glide-out shelves must be placed at height 2, starting from below.**


To assemble the glide-out shelves on the chrome-plated supports, proceed as follows:

### 5.1. *Glide-out shelves with folding clip*

- Remove the protective film.
- Hook the large clips on the upper rail and extend the runner until it hooks on the small clips on the lower rail.

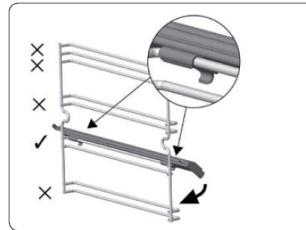

- You will hear a "click" when the glide-out shelf is correctly secured.
- The notch to fix the tray/support must remain at the front part of the oven.

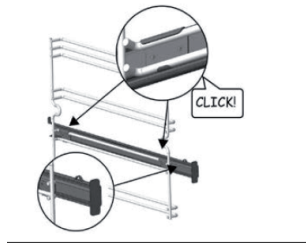


### 5.2. *Glide-out shelves with direct clip*



#### **IMPORTANT!**


The single extraction shelf must be placed at heights 1, 2 and 3 starting from below.  
 The double extraction shelves must be placed at heights 1, 2 and 3 starting from below.  
 In 45 cm ovens, the glide-out shelves are positioned at height 1.

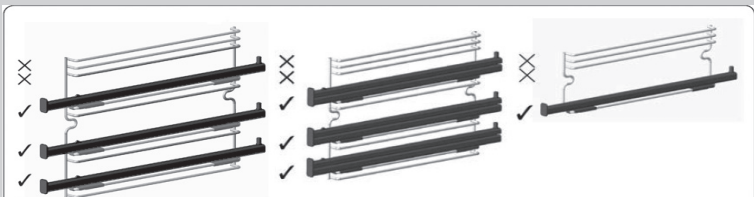

## Maintenance work

---

- Hook the clip on the top rail at the desired level.
- You will hear a "click" when the glide-out shelf is correctly secured.
- The notch to fix the tray/support must remain at the front part of the oven.

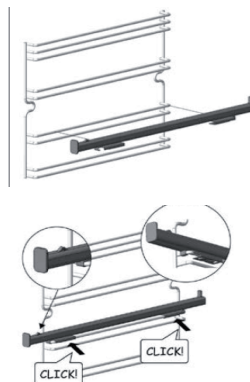

### CAUTION!

Disconnect the appliance from the mains power supply before any operation.

## 5.3. Cleaning the oven accessories

Clean the outside of the oven and accessories with warm soapy water or with a mild detergent. Take care with rust-free and varnished surfaces and only use sponges or cloths that do not scratch.



### CAUTION!

The telescopic glide-out shelves must not be placed in the dishwasher. This will remove the fat that enables them to slide and the runners will become blocked, making them useless.

## 6. Maintenance work

---

### 6.1. Replacing the oven lamp




### IMPORTANT!

Before you replace the lamp, make sure that the oven has been disconnected from the mains.

The replacement bulb must withstand temperatures up to 300 °C. They can be ordered from our technical Customer Service.


### 6.1.1 Changing the side bulb

- Remove the chrome-plated runners and/or glide-out shelves by removing the screw nuts (A).

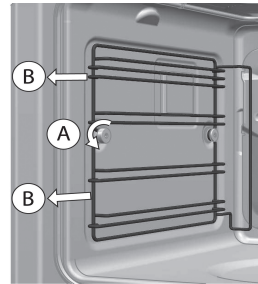


- Use a tool to take out the glass cover of the lamp mounting.
- Replace the lamp.
- Attach the glass cover again, making sure it is properly positioned.

The replacement lamp must be resistant to temperatures of up to 300°C. They can be ordered from our technical Customer Service.

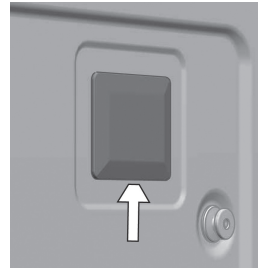

### 6.1.2 Changing the upper bulb

- Unscrew the glass cover of the bulb-holder.
- Replace the bulb and reassemble the glass cover.

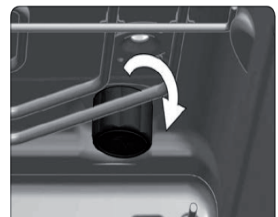

### 6.1.3 Changing the LED lamp

Call the Technical Assistance Service Department

### 6.2. Removing the oven door


(not possible for ovens with a microwave function)

For easy cleaning, the door can be dismantled. To do this, follow the instructions for the type of door your oven has.

#### 6.2.1 Door with hinge on body

##### Dismantling the door

- Open the oven door as far as it will go.
- Block the hinge by turning the latches.
- Swing the hinge locks down towards you.
- Close the door to the locked position.
- Hold the door with both hands holding on to both sides,

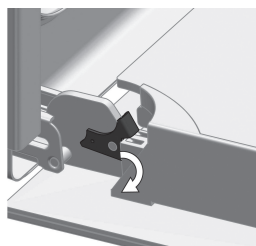

##### Assembling the door

- Hold the door with both hands at the lower part of the sides, insert the hinge arms into their housings and let the door fall as far as it will go.
- Open the oven door fully.
- Turn the latches back to their original position.




**CAUTION!**

Make sure the door is inserted completely by turning the latches, because otherwise it could block.



If the latches are hard to turn, use a flat tool to turn them.

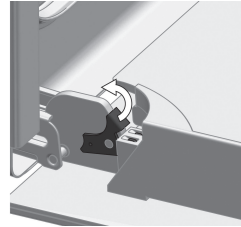

## 6.2.2 Door with hinge on door


### Dismantling the door

- Open the oven door as far as it will go.
- Block the hinge by turning the latches.
- Swing the hinge locks down towards you.
- Close the door to the locked position.
- Hold the door with both hands holding on to both sides, lift up and pull out the oven door until the hinges are fully detached.
- To assemble the door, carry out the steps in the reverse order.



### Assembling the door

- Hold the door with both hands at the lower part of the sides, insert the hinge arms into their housings and let the door fall as far as it will go.
- Open the oven door fully.
- Turn the latches back to their original position.

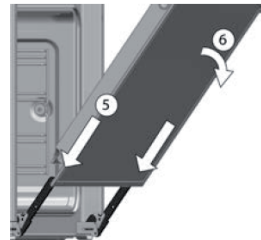

If the latches are hard to turn, use a flat tool to turn them.



### ATTENTION!

Make sure the door is inserted completely by turning the latches, because otherwise it could block.

### 6.3. Dismantling/assembling the interior glass of the door

Depending on the model, your oven may have 2, 3 or 4 panes of glass. Follow the instructions for the type of door your oven has.

#### Assembling

Depending on the model, your oven may have a completely closed stainless steel door. With this door it isn't possible to remove the panes of glass.




### ATTENTION!

If dismantling the glass panes with the door fitted in the oven, always do it with the hinge in the locked position. If not, the door will close and the unmounted glass panes could break and cause injury.




To prevent this, dismantle the glass panes with the door removed, following the instructions in the previous section.

- Using your fingers, press the buttons located at the top of both sides of the oven door.

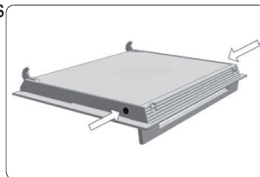

- Keep them pressed and pull on the plastic seal above the door.
- Remove the glass panes from the door. Clean them with a glass cleaner or soap and water and a soft cloth.

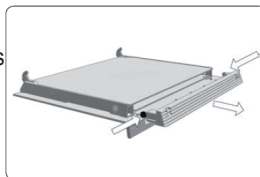





**ATTENTION!**

Pay attention to the order and position of the glass panes when removing them as they must be reassembled in the same order and position when you have finished cleaning them.

- Once clean, insert pane no. 3 into the same position so that the TERMOGLASS indication printed on it is visible as shown in the figure.

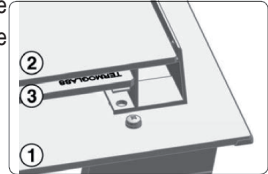

- In pyrolytic ovens, the TERMOGLASS indication on panes numbers 3 and 4 must be visible as shown.
- Insert pane no. 2 with the printed part facing toward the inner side of the door.
- Reattach the top seal of the door, making sure that the side tabs fit into their housings.

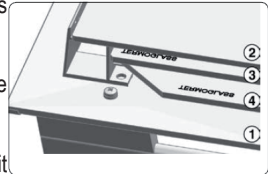**ATTENTION!**


Never switch the oven on if any of the glass panes on the door is missing.

### 6.4. Dismantling/assembling the shelf runners


12 rack levels are available in the side racks. Rack levels are counted from the top to the bottom from 1 to 12. Rack level 1 is the lowest rack level.

#### Dismantling

- Open the oven door as far as it will go.
- Take the accessories out of the oven.
- Completely loosen the nut at the front of the fastening element (A), pull the supports forward (B) and remove them.
- Removing the side racks

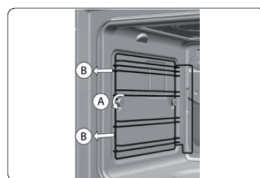

- Insert the rear notch into the rear fastening nut.
- Fix the front fastening nut (C) in the front notch of the support.
- Secure the support with the nut (D) and turn until it is fully adjusted (E).

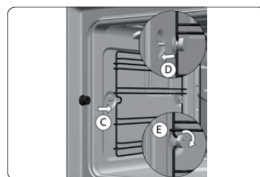


## 6.5. Dismantling the rear wall



First of all remove the side runner to remove the rear wall, following the instructions in the previous section.

- Remove the lower four screws (1) and then the top screw (B).

To assemble rear wall, carry out the steps in the reverse order.

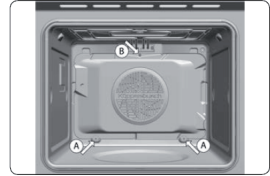


### ATTENTION!

**For your own safety: Never use the oven without the rear wall!**

### Ovens with a folding grill

To clean the top part of the oven.

- Take the accessories out of the oven.
- Wait until the oven is cold.
- Push the rail of the grill element (A) with both hands towards the back of the oven, to release it from the upper fastening nut (B).

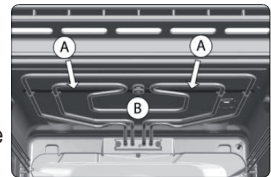


- Let the element fall and clean the top part of the oven.
- Then put the grill element back in place in its original position and proceed in the reverse order.



### 7. Overview of your oven

---

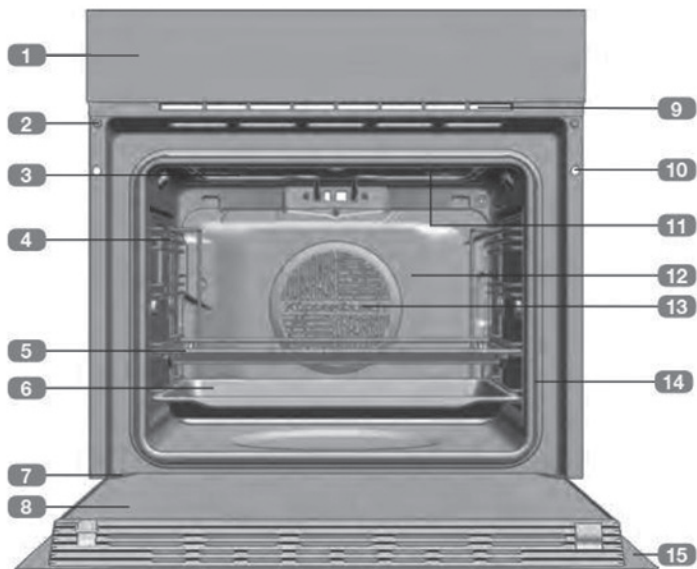

- 1 Control panel
- 2 Door lock (only for pyrolytic models)
- 3 Grill element
- 4 Rack levels
- 5 Gridiron
- 6 Baking tray
- 7 Hinge
- 8 Inner glass
- 9 Cooling air exit
- 10 Unit mounting
- 11 Lamp
- 12 Rear wall
- 13 Hot-air fan
- 14 Oven sealing
- 15 Oven door

## 7.1. Control panel - sensor keys and displays



- 1 ON/OFF**  
With this sensor you can switch off an on your appliance-



- 2 Functions**  
With this sensor you can select the cooking functions.



- 3 Programmes**  
With this sensor you can select the automatic programmes.



- 4 Favourites**  
With this sensor you have access to the saved programme.



- 5 Hot air convection\***  
With this sensor you can select the hot air convection functions.



- 5 Pyrolytic\***  
With this sensor you can select the pyrolytic functions.



- 5 Microwave\***  
With this sensor you call up the microwave functions or switch on the additional microwave function.



- 6 Settings**  
With this sensor you have access to the setting menu.



- 7 Childproof lock**  
With this sensor you activate the childproof lock.



- 8 Rapid heating**  
With this sensor you can activate or deactivate the rapid heating function.



- 9 Time settings / Timer**  
With this sensor you have access to the menu Time setting.



- 10 Light**  
With this sensor you can switch off an on the lighting of the interior of the oven.



- 11 back**  
With this sensor you turn to the in a previous step.



- 12 OK for selection/confirmation**  
With this sensor you confirm your selection or start a process.



- 13 up - down**  
With these sensors you can scroll up and down in a menu.



- 15 Time setting of cooking functions**  
You can determine the cooking time or the end of a cooking time.



- 16 Temperature**  
With this sensor you can change the temperature which has been set.











 



- 17 Weight**  
With this sensor you can change the weight settings.

\* depending on the model


### 7.2. Setting the clock












 
The clock must be set before the oven is used and whenever power has been disconnected to the appliance. In such cases «12.00» will blink in the display.

When the oven is switched on, 12:00 will blink in the display.

- Press the symbol  (up) or  (down) to select the hour.  
Confirm by pressing .
- Press the symbol  (up) or  (down) to select the minutes.  
Confirm by pressing .
- Press the symbol  (up) or  (down) to select the clock display.  
Confirm by pressing .
- Press the symbol  (up) or  (down) to select the display format and confirm by pressing .
  
- An acoustic signal will sound and the oven will switch to the standby mode. The time that has been set will be shown.

#### **Should you wish to change the time:**

With the oven switched off, press the  symbol for 3 seconds and wait until the time setting is shown.

- Press the symbol  (up) or  (down) to select the hour.  
Confirm by pressing .
- Press the symbol  (up) or  (down) to select the minutes and confirm by pressing .
- Press the symbol  (up) or  (down) to select the clock display and confirm by pressing .
  
- Press the symbol  (up) or  (down) to select the display format.  
Confirm by pressing .

The oven will switch to the standby mode. The time that has been set will be shown.

### 8. Roasting and baking charts

#### 8.1. Guidelines for baking

- The material of your baking tins also plays a role in baking. Dark baking tins, which transmit heat direct to food being cooked, are ideal.
- Baking times may differ slightly due to differences in the type of ingredients used. Testing your cake towards the end of the cooking time with a wooden skewer is ideal. If no dough sticks to the skewer, the cake will be ready.
- When cakes with a moist fruit topping are being baked, the development of humidity is particularly high. Never bake more than two of this kind of cake at the same time.
- If you are baking several cakes in baking tins at the same time, add about 5 to -10 minutes for each additional tray used.

| Guidelines for baking                           |               |                        |                 |                        |   |                           |                            |
|---|---------------|------------------------|-----------------|------------------------|---|---------------------------|----------------------------|
| Operating mode                                  | Hot air       |                        | Top/Bottom heat |                        | Pizza mode<br>Hot air convection<br>bottom heat |                           |                            |
| Preferred settings<br>have a grey<br>background | Rack<br>level | Tempera-<br>ture in °C | Rack<br>level   | Tempera-<br>ture in °C | Rack<br>level                                   | Temper-<br>ature in<br>°C | Cooking<br>time<br>in min. |
| <b>Cakes</b>                                    |               |                        |                 |                        |   |                           |                            |
| <b>Cake mixture</b>                             |               |                        |                 |                        |   |                           |                            |
| Gugelhupf                                       | 2             | 170                    | 2               | 170-190                |   |                           | 60-70                      |
| Tin cake  | 2             | 170                    | 2               | 170-190                |   |                           | 50-70                      |
| Madeira cake                                    | 2             | 160                    | 2               | 160-180                |   |                           | 60-70                      |
| Flan bases                                      | 2             | 170                    | 2               | 170-190                |   |                           | 20-30                      |
| Muffins   | 2             | 160-170                | 2               | 170-180                |   |                           | 20-25                      |
| Flat cakes                                      |               |                        |                 |                        |   |                           |                            |
| with a dry topping                              | 2             | 160-170                | 2               | 180-200                |   |                           | 20-35                      |
| with a moist topping                            | 1-2           | 160-170                | 1-2             | 170-180                | 3   | 160-170                   | 35-50                      |



| Kneaded dough                |     |         |     |         |   |         |        |
|------------------------------|-----|---------|-----|---------|---|---------|--------|
| Flan bases                   | 2   | 170-180 | 2   | 180-200 |   |         | 25-35  |
| Cheese cake                  | 2   | 150-160 | 1-2 | 160-170 |   |         | 70-80  |
| Small biscuits               | 2   | 170     | 2   | 180-200 |   |         | 15-30  |
| Flat cakes                   |     |         |     |         |   |         |        |
| with a dry topping           | 2   | 160-170 | 2   | 180-190 |   |         | 25-35  |
| with a moist topping         | 1-2 | 160-170 | 1-2 | 170-180 | 2 | 160-170 | 30-50  |
| Yeast dough                  |     |         |     |         |   |         |        |
| Gugelhupf                    | 2   | 150-160 | 2   | 175-180 |   |         | 40-65  |
| Yeast cake                   | 2   | 150-160 | 2   | 175-180 |   |         | 40-50  |
| Rich sweet bread (preheated) | 2   | 150-160 | 2   | 175-180 |   |         | 50-70  |
| Small biscuits               | 2   | 140-150 | 2   | 180-200 |   |         | 15-30  |
| Flat cakes                   |     |         |     |         |   |         |        |
| with a dry topping           | 2   | 150-160 | 2   | 180-190 |   |         | 30-40  |
| with a moist topping         | 1-2 | 160-170 | 1-2 | 170-180 | 3 | 160-170 | 30-50  |
| Sponge dough                 |     |         |     |         |   |         |        |
| Gateaux and flans (preheat)  | 2   | 150-160 | 2   | 175-180 |   |         | 30-40  |
| Rolls (preheat)              | 2   | 170-180 | 2   | 180-200 |   |         | 15-25  |
| Egg white baking             |     |         |     |         |   |         |        |
| Meringue                     | 2   | 80-90   | 2   | 100-120 |   |         | 80-120 |
| Cinnamon stars               | 2   | 100-120 | 2   | 120-140 |   |         | 20-40  |
| Macaroons                    | 2   | 100-120 | 2   | 120-140 |   |         | 20-50  |
| Other doughs                 |     |         |     |         |   |         |        |
| Puff pastry                  | 2   | 170-180 | 2   | 190-210 |   |         | 15-30  |

## Roasting and baking charts

|  |   |         |        |         |   |     |       |
|--|---|---------|--------|---------|---|-----|-------|
| Puff pastry made with leavened dough           | 2 | 170-180 | 2      | 190-210 |   |     | 30-40 |
| Puff pastry made with curd cheese              | 2 | 160-180 | 2      | 180-200 |   |     | 30-40 |
| Choux pastry                                   | 2 | 170-180 | 2      | 190-210 |   |     | 30-40 |
| Dough made with curd cheese and oil            | 2 | 150-160 | 2      | 170-180 |   |     | 30-40 |
| Honey cake                                     | 2 | 140-150 | 2      | 170-180 |   |     | 20-35 |
| <b>Bread and pizza</b>                         |   |         |        |         |   |     |       |
| Sour dough                                     | 2 | 180     | 2      | 180     |   |     | 50-70 |
| (preheat: 230°C<br>prebake: 10 min.<br>-230°C) |   |         |        |         |   |     |       |
| Bread made with yeast/white bread              | 2 | 180     | 1 or 2 | 200     |   |     | 30-60 |
| (preheat)                                      |   |         |        |         |   |     |       |
| Pretzels                                       | 2 | 200     | 2      | 220     |   |     | 15-20 |
| (preheat: 230°C)                               |   |         |        |         |   |     |       |
| Pizza (preheat: 250°C)                         |   |         |        |         | 1 | 220 | 8-12  |

### 8.2. Guidelines for roasting

- Meat that has been well hung is best suited for roasting.
- Make criss-cross cuts on the outer layers of fat on the meat (e.g. knuckle).
- Roasts can all be cooked with or without the addition of fat.
- Roast the meat on the grid with the drip pan underneath.
- Coat poultry, such as chicken, goose or turkey, with a marinade made of oil, salt and paprika powder. This means that meat does not have to be basted while it is roasting.

#### Tips for more precise results

The cooking progress, particularly of large joints, is not always easy to judge from the outside. Chefs de cuisine and hobby cooks therefore use a roasting thermometer. This provides reliable information about the core temperature and thus also about how far the meat has been roasted.

| Guidelines for roasting                   |            |                   |                 |             |                                |                   |                |                        |
|---|------------|-------------------|-----------------|-------------|--------------------------------|-------------------|----------------|------------------------|
| Operating mode                            | Hot air    |                   | Top/Bottom heat |             | Hot air convection bottom heat |                   |                |                        |
| Preferred settings have a grey background | Rack level | Temperature in °C | Rack level      | Temp. in °C | Rack level                     | Temperature in °C | Weight of meat | Baking time in minutes |
| <b>Type of meat</b>                       |            |                   |                 |             |                                |                   |                |                        |
| <b>Pork</b>                               |            |                   |                 |             |                                |                   |                |                        |
| Roast pork                                | 2          | 170               | 2               | 170-190     | 2                              | 160-180           | 2,000          | 120                    |
| Pork shoulder                             | 2          | 180               | 2               | 180-200     | 2                              | 170-190           | 1,200          | 120                    |
| Pork fillet                               | 2          | 180               | 2               | 180-200     | 2                              | 170-190           | 1,000          | 45                     |
| <b>Beef</b>                               |            |                   |                 |             |                                |                   |                |                        |
| Joint of beef                             | 2          | 170               | 2               | 170-190     |                                |                   | 2,000          | 150                    |
| Roastbeef                                 | 2          | 160 / 90*         | 2               | 160 / 100*  |                                |                   | 1,500          | 30                     |
| Beef fillet                               | 2          | 160 / 90*         | 2               | 160 / 100*  |                                |                   | 1,200          | 30                     |
| <b>Veal / lamb</b>                        |            |                   |                 |             |                                |                   |                |                        |
| Lamb roast                                | 2          | 160               | 2               | 170-180     |                                |                   | 1,000          | 140                    |
| Roast veal                                | 2          | 160               | 2               | 170-180     |                                |                   | 1,000          | 90                     |
| <b>Steak</b>                              |            |                   |                 |             |                                |                   |                |                        |
| Rump steak (browned beforehand)           | 2          | 120**             | 2               | 120**       |                                |                   | 300            | 10                     |

## Roasting and baking charts

|   |        |       |        |               |        |         |       |     |
|---|--------|-------|--------|---------------|--------|---------|-------|-----|
| T-bone steak<br>(browned<br>beforehand) | 2      | 180** | 2      | 180-<br>200** |        |         | 1,000 | 6   |
| <b>Poultry</b>                          |        |       |        |               |        |         |       |     |
| Chicken                                 | 2      | 180   | 2      | 180-<br>200   | 2      | 180-200 | 1,000 | 60  |
| Duck                                    | 2      | 170   | 2      | 170-<br>190   | 2      | 170-190 | 1,500 | 75  |
| Goose                                   | 1 or 2 | 160   | 1 or 2 | 170-<br>190   | 1 or 2 | 170-190 | 3,000 | 120 |
| Turkey                                  | 1 or 2 | 160   | 1 or 2 | 170-<br>190   | 1 or 2 | 170-190 | 5,000 | 180 |
| <b>Fish</b>                             |        |       |        |               |        |         |       |     |
| Whole fish                              | 2      | 200   | 2      | 200-<br>220   |        |         | 1,000 | 35  |

### 8.3. Guidelines for grilling

- The grill should be pre-heated for approx. 5 minutes before being used.
- Put the meat that has been prepared onto the grid so that the heat from the grill body has a direct effect. A clearance of 3 cm must be maintained.
- Always place the drip pan under the food in order to collect dripping meat juices.
- Food grilled on the grid will need to be turned.
- The first side will need to be grilled a little longer than the second side.
- Since the food generally differs in shape, thickness and consistency, you should check now and then on whether or not the meat has been cooked as required. Specified grilling times can thus only serve as a guide.

#### Tips for ideal results

Also use a roasting thermometer for low-temperature cooking. This provides reliable information about the core temperature inside the meat and thus also about how far the meat has been roasted.

| Guidelines for grilling |            |        |        |                     |        |
|-------------------------|------------|--------|--------|---------------------|--------|
| Operating mode          |            | Grill  |        | Large-surface grill |        |
|                         | Rack level | 1 side | 2 side | 1 side              | 2 side |
| <b>Type of meat</b>     |            |        |        |                     |        |
| <b>Pork</b>             |            |        |        |                     |        |
| Pork chop               | 4          | 10-12  | 8-10   | 14-15               | 8-10   |
| Belly                   | 4          | 12-15  | 8-10   | 16-18               | 10-12  |
| Pork fillet             | 4          | 10-12  | 8-10   | 14-16               | 10-12  |
| Frying sausages         | 4          | 8-10   | 6-8    | 12-15               | 10-12  |
| Fried sausage coils     | 4          | 10-12  | 8-10   | 10-14               | 9-11   |
| Kebab                   | 3-4        | 9-11   | 7-8    | 15-20               | 10-12  |
| <b>Beef</b>             |            |        |        |                     |        |
| Beef fillet, rare       | 4          | 6-7    | 5-6    | 8-10                | 6-7    |
| Beef fillet, medium     | 4          | 7-9    | 6-7    | 9-11                | 6-9    |
| <b>Veal / lamb</b>      |            |        |        |                     |        |
| Lamb chop               | 4          | 7-8    | 6-7    | 9-11                | 6-9    |
| Veal steak              | 4          | 8-10   | 7-8    | 10-12               | 8-9    |
| <b>Poultry</b>          |            |        |        |                     |        |
| Chicken drumsticks      | 3          | 15-18  | 10-12  | 17-20               | 11-14  |
| Chicken halves          | 3          | 18-20  | 10-12  | 22-24               | 12-15  |
| <b>Fish</b>             |            |        |        |                     |        |
| Fish fillet             | 4          | 6-7    | 4-5    | 10-12               | 7-8    |
| Whole fish              | 3          | 5-7    | 4-6    | 8-11                | 7-10   |
| <b>Toast</b>            |            |        |        |                     |        |
| Toast                   | 3          | 2-3    | 2-3    | 4-6                 | 3-4    |
| Toast with a topping    | 3          | 6-8    |        | 10-12               |        |

### 8.4. Recommended food probe temperatures

| Recommended food probe temperatures |                         |        |           |
|-------------------------------------|-------------------------|--------|-----------|
|                                     | Core temperatures in °C |        |           |
|                                     | Rare                    | Medium | well done |
| <b>Type of meat</b>                 |                         |        |           |
| <b>Pork</b>                         |                         |        |           |
| Pork fillet                         |                         | 63     | 65        |
| Roast pork / jam                    |                         | 68-70  | 75        |
| Knuckle                             |                         |        | 80-85     |
| Cutlet on the bone                  |                         |        | 75-80     |
| Shoulder                            |                         |        | 95        |
| Gammon                              |                         | 55-62  | 64-68     |
| Meat loaf                           |                         |        | 75        |
| <b>Beef</b>                         |                         |        |           |
| Beef fillet                         | 38-55                   | 58-65  | from 65   |
| Roastbeef                           | 38-55                   | 55-60  | from 65   |
| Roulades                            |                         |        | 70        |
| Joint of beef                       |                         |        | 85-90     |
| Boiled beef                         |                         |        | 90        |
| Entrecote                           |                         | 55-58  |           |
| <b>Veal</b>                         |                         |        |           |
| Knuckle                             |                         |        | 80-85     |
| Roasting                            |                         |        | 64-74     |
| Breast                              |                         |        | 75-78     |
| Saddle                              |                         | 65-70  |           |
| Shoulder                            |                         |        | 75-80     |
| Sirloin                             |                         | 60     |           |

| <b>Lamb</b>            |   |       |       |
|------------------------|---|-------|-------|
| Lamb                   |   |       | 79-85 |
| Leg of lamb            |   | 60    | 70-72 |
| Lamb chop              |   | 55    |       |
| Saddle of lamb         |   | 60-62 | 68    |
| Rack of lamb           |   | 55    |       |
| <b>Game</b>            |   |       |       |
| Wild boar fillet       |   | 60-63 |       |
| Roast wild boar        |   |       | 75-78 |
| Leg of wild boar       |   |       | 75    |
| Saddle of roe venison  |   | 50-60 |       |
| Roast roe venison      |   | 65    |       |
| Saddle of deer venison |   | 54-60 |       |
| Roast deer venison     |   | 62    | 75    |
| Toast with a topping   | 3 | 6-8   |       |
| <b>Poultry</b>         |   |       |       |
| Chicken                |   |       | 80-90 |
| Duck                   |   |       | 80-90 |
| Breast of duck         |   | 62-65 |       |
| Goose                  |   | 75-80 | 90-92 |
| Turkey                 |   |       | 80-90 |
| <b>Fish</b>            |   |       |       |
| Salmon                 |   | 57    | 60    |
| Pike                   |   | 58    | 60    |
| Zander                 |   | 58    | 60    |
| Tuna                   |   | 55    | 58    |
| Redfish                |   | 55    | 60    |
| Cod                    |   | 54    | 60    |
| Trout                  |   | 54    | 60    |
| Yellow mackerel        |   | 54    | 60    |

### 8.5. Low-temperature cooking guidelines

| Low-temperature cooking guidelines |                |                                |   |   |
|------------------------------------|----------------|--------------------------------|---|---|
|                                    | Weight<br>in g | Browning<br>time<br>in minutes | Cooking time<br>in minutes<br>(core temperature<br>as an alternative) | Cooking<br>temperature<br>in °C<br>(oven setting) |
| <b>Type of meat</b>                |                |                                |   |   |
| <b>Pork</b>                        |                |                                |   |   |
| Pork fillet                        | 400-600        | 5                              | 60-90   | 85  |
| Roast pork / jam                   | 1000-1500      | 10-12                          | 230-250   | 85  |
| Loin                               | 1000-1500      | 10-12                          | 120-150   | 85  |
| Piece of rib / cutlet              | 800-1000       | 8-10                           | 120-140   | 85  |
| <b>Beef</b>                        |                |                                |   |   |
| Beef fillet                        | 700-1200       | 5-9                            | 100-140   | 80  |
| Roastbeef                          | 700-1800       | 10-12                          | 180-120   | 70  |
| Point steak                        | 1500-1800      | 10-15                          | 150-200   | 80  |
| Nut                                | 1500-2000      | 10-12                          | 200-230   | 80  |
| Entrecote                          | 1500-1800      | 10-12                          | 150-180   | 80  |
| <b>Veal</b>                        |                |                                |   |   |
| Fillet steak                       | 500-800        | 5-6                            | 90-110  | 85  |
| Nut                                | 1500-1800      | 10-12                          | 140-160   | 85  |
| Saddle                             | 1000-1500      | 8-10                           | 110-120   | 85  |
| <b>Lamb</b>                        |                |                                |   |   |
| Leg of lamb                        | 2000-2500      | 10-12                          | 200-250   | 80  |
| Saddle fillet                      | 400-600        | 3-5                            | 60-80   | 80  |
| <b>Poultry</b>                     |                |                                |   |   |
| Breast of duck                     | 400-600        | 4-5                            | 70-80   | 85  |
| Turkey breast                      | 400-600        | 3-4                            | 50-60   | 85  |



 
## 9. Oven functions

The functions all depend on the model in question.

### 9.1. Cooking functions

#### Top / bottom heat

Heat from the top and the bottom ensures even baking results for food placed on one level. Ideal for baking delicate cakes and gateaux, such as yeast dough, cheesecake, etc.




#### Ökotherm hot air

The fan distributes the heat generated by the ring heating element at the back of the oven. The heat spread evenly throughout the oven makes it possible to cook evenly at several levels without the flavour or odour being transmitted.




#### Top / bottom heat with hot air

 The fan distributes the heat generated by the heating elements at the top and bottom evenly throughout the oven. Ideal for biscuits and roasts.




#### Ökotherm pizza setting

 A combination of bottom heat and hot air is ideal for baking crispy bases with a moist topping. Perfect for fresh pizza, biscuits or cakes with a fruit topping and pastries and pies.




#### Bottom heat

 With heat generated only at the bottom, this mode ensures that bases or especially crispy and/or that they are browned better on the bottom. Ideal for very moist fruit cakes and for blind-baking cake bases.



#### Top heat

 The heat generated by the top heating element is ideal for gratinating and browning dishes.




### ECO

ECO makes it possible to cook dishes with a lower energy consumption than usual. In order to save on energy, the oven switches off automatically a few minutes before the end of the cooking time and uses the remaining heat in the oven to cook food through.




### Ökotherm intensive hot air

 The top heat switched on in addition to heating the oven up with hot air ensures a delicious crust and intensive browning. Ideal for oven-baked potatoes, roasts and for gratinating dishes.



### Grill / bottom heat

 
Bottom heat in combination with the grill from the top. This mode is ideal for cooking meat. It provides crispy results.



### Large-surface grill


Perfect for cooking large quantities of food to be grilled, such as fish or meat.

 This enables larger surfaces to be gratinated than with a grill. And the gratinating power is higher so that food browns quicker.




### Grill

 Gratinating and browning. The small grill saves energy when small quantities of food is cooked. Ideal for small quantities of fish and meat. Makes it possible to brown the outer layer without influencing the inside of the food to be cooked.




### Fan-assisted grilling

 The fan distributes the heat generated by the grill throughout the oven, thus providing grilled food that has a crust and is juicy inside. Ideal for grilled chicken, duck and roasts.




### Intensive fan-assisted grilling

 This combination of a large-surface grill and a fan ensures that food to be cooked remains juicy inside and that it is beautifully crispy and brown on the outside. Ideal for game and large poultry.




**Intensive fan-assisted grilling + bottom heat**


This combination of a large-surface grill, bottom heat and a fan ensures that large food portions remain juicy inside and that they are beautifully crispy and brown on the outside. Ideal for stuffed roasts or poultry.

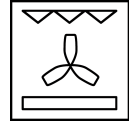**9.2. Special functions****Defrosting**

This function serves to gently defrost frozen food.

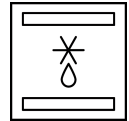**Low-temperature cooking**


Food is cooked very gently at low temperatures, which also keep it very juicy. Ideal for beef, pork, lamb, veal and poultry.

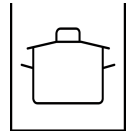**Keeping food warm**

Food is kept warm at low temperatures, without continuing to be cooked. Ideal for food that is to be served later on.

**Frozen foods**

The optimal distribution of heat that has only been slightly warmed up in the oven makes this programme ideal for defrosting frozen food.

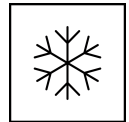**Warming plates**

Good food just tastes better at the right temperature. This mode heats up plates at a low temperature just before food is served. This prevents it from cooling down so quickly when it is being put onto plates so it can be served hot.




## Oven functions

---


### Gratinating

This function is ideal for gratinating gratin dishes, oven bakes and soufflés.

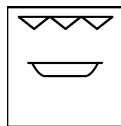


### Preserving

Ideal for preserving foods such as fruit and vegetables.

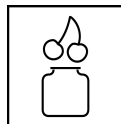


### Dehydrating

With the dehydrating mode water is extracted from food to extend its shelf life. Most vitamins and minerals are preserved. Dehydrating is ideal in the production of dried fruit, dried meat, fruit purees and dried cod.

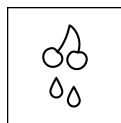


### Baking bread

This programme is ideal for getting a light crumb texture and a beautifully browned crust.

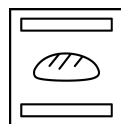


### Proving

Best function for allowing dough to rise, for example.

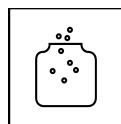

### Yoghurt mode

Yoghurt cultures feel really good in this mode and your yoghurt will turn out perfect.

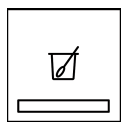


 
## 10. Operating the oven





The fan is switched on and off in the case of some programmes, but this is not an indication of a fault.

### 10.1. Turning the oven on and off

In order to be able to use your oven for cooking food, you will need to press on the  symbol. If no function or no automatic programme is selected, the oven switches back off after a few seconds and shows the current time or switches to sleep mode if manual confirmation is on (see section on Sleep mode).

Switch the oven off by pressing symbol .

### 10.2. Sleep Mode



 
If manual confirmation is activated (it is activated when delivered from the factory), the oven switches over to Sleep mode after 30 seconds if you do not making a setting on the device within this 30 seconds. The Sleep mode is active for 30 seconds and allows you to return to the previous screen by pressing the On/Off symbol  or the  sensor. All sensors which were pressed up to activation of Sleep mode are stored for this period.

After 5 minutes have elapsed, the oven switches off and displays the time.

### 10.3. Putting the appliance into operation for the first time




The language, date and time, temperature and weight units must be set before the oven is used for the first time.

#### 10.3.1 Setting the language


- Press the symbol  (up) or  (down) to select the language tile.
- Confirm by pressing .

## Operating the oven














---

- Select the desired language pressing the symbol  (up) or  (down)..
- Confirm by pressing .

You will go to the Settings view.


- To confirm the language setting, press .

### 10.3.2 Setting date and time







- Press the symbol  (up) or  (down) to select the date/ time tile.
- Confirm with .
  
- Press the symbol  (up) or  (down) to select the year.
- Confirm with .
- Repeat these steps to select month and day.
- Always confirm with .
  
- Press the symbol  (up) or  (down) to select the hour tile.
- Confirm with .
- Repeat these steps to select the minutes.
- Confirm with . You will then need to select the clock display.
- Confirm with . Finally you must select the display format.
- Confirm with .

You will arrive at the Home screen.

### 10.3.3 Setting date and time - speed calling













Press the  symbol with the oven switched off and wait until the date indication appears. Then you can set date, time, type of clock and display format with the above described steps.

### 10.3.4 Unit settings


- Press the symbol  (up) or  (down) to select the weight tile (kilogram preset).
- Confirm with .
  
- Press the symbol  (up) or  (down) to select the temperature unit (Celsius preset).
- Confirm with .

After setting the units, putting the appliance into operation for the first time is finished. You will arrive at the Home screen.







### 10.4. Selecting a cooking function

- Switch the oven on by pressing symbol .
  
- Select the  tile on the home screen.
- Press the symbol  (up) or  (down) to select the cooking functions .
- Press  to confirm your setting.
- Press the symbol  (up) or  (down) to select the function.
- Confirm with .
  
- Press the symbol  (up) or  (down) to select the cooking temperature.
- Confirm with .


You will access the settings view. You can also set the cooking time or the finish time. (See chapters Cooking time setting/ End of cooking time setting.)


- To confirm the settings, press . The cooking process will be commenced.


### 10.5. Selecting a special function


- Switch the oven on by pressing the symbol .
  
- Select the  tile on the home screen.
- Press the symbol  (up) or  (down) to select the special functions .
- Confirm the setting with .

### 10.6. Changing a setting during the cooking process

Press the  symbol when you want to change a cooking function during the cooking process. Then follow the instructions above.

Press the  symbol when you want to change the cooking temperature during the cooking process. Then following the instructions above.

During the cooking process, press the symbol  to adjust the cooking time. (See chapters Cooking time setting/ Selecting the end of cooking time.)

Press symbol  to finish the procedure.











#### INFO

Changes must all be actively confirmed with ; if they are not, the screen will return to the old display after 8 seconds and the new settings will not be saved.




## 10.7. Automatic programme

### 10.7.1 Selecting an automatic programme

- Switch the oven on by pressing symbol .
  
- Select the  tile on the home screen.
- Press the symbol  (up) or  (down) to select the category..
- Confirm by pressing .
  
- Press the symbol  (up) or  (down) to select the automatic programme and confirm by pressing .

Then set weight and cooking setting in the same way. Cooking times are automatically calculated. You can also set the finish time (see End of cooking time setting) or modify the cooking time.

- To confirm the settings, press . The cooking process will be commenced.

\* In selected programs it is not necessary to set a weight.

 
Depending on the program, the oven may indicate at which level the food should be inserted.



In selected programs, the empty oven must first be preheated. The oven shows you when the food must be placed in which level.

### 10.7.2 Important information about cooking with programmes










When a programme is activated and on the basis of the weight indicated, the oven automatically calculates the temperature and time needed for cooking the food. The temperature can be adapted in programmes with weight settings. If expressly no other information follows, the cooking time refers to a cooking time without pre-heating. This is why it is very important to select the right weight of the food to be cooked, so that it can be appropriately prepared. For the roasting programmes, after a specific time has lapsed, the oven will indicate that the roast should be turned. To do so, the oven emits an acoustic signal for a certain length of time. The symbol  will appear on the display until the roast has been turned. If you do not turn the roast, the oven will automatically continue operating the programmed method of cooking after a few minutes.

## 10.8. Changing weight and temperature

### 10.8.1 Changing the weight of the food


If you wish to change the weight of the dish to be cooked, you can automatically change the duration and temperature corresponding to the selected programme.

Proceed as follows to change the weight:







 
- Touch the weight symbol .
- Press the symbol  (up) or  (down) to set the weight and confirm by pressing .
  
- Press the symbol  (up) or  (down) to select the cooking level.
- Confirm by pressing .

You will be returned to the settings view.

- Confirm by pressing .

The process runs while the adaptation is taking place in the background. The new settings for the process are not adopted until they are confirmed by pressing .

Alternative: (The process is terminated.)

- Then press the  symbol (back) several times until you reach weight setting. .
- Press the symbol  (up) or  (down) to set the weight and confirm by pressing .
  
- Press the symbol  (up) or  (down) to set the cooking level and confirm by pressing .

You will be returned to the settings view. Cooking times are automatically calculated. You can also set finish times and cooking time.

- Confirm by pressing .





The oven continues the cooking procedure with the adapted cooking settings.

### 10.8.2 Changing the cooking temperature

A cooking temperature has been pre-set for all of the programmes.

The temperature can only be changed within a specified range of cooking programmes with weight settings. For the functions, the temperature can be selected for a specific function within a range of 30°C (no temperature setting) and 300°C.

Proceed as follows to change the weight:

- Touch the temperature symbol .
- Press the symbol  (up) or  (down) to set the cooking temperature and confirm by pressing .

You will be returned to the settings view or you will return to the cooking process.

- Confirm by pressing  In the settings screen.





The oven carries out the cooking process with the new settings.

## 10.9. Time settings

### 10.9.1 Cooking time setting

The cooking time for the programmes is a default setting. There is no default time for the cooking functions.

Proceed as follows to cooking time:

- Touch the symbol .
- Press the symbol  (up) or  (down) to set the cooking time and confirm by pressing .

 
Now it will be possible for you to set the end of cooking time. (See chapter Selecting the end of cooking time.)

This step is skipped if you set the final cooking time while the process is running.




 
- Confirm by pressing .



**INFO**


Once the programmed time has expired, the oven will switch off and an acoustic signal will sound. Press  to stop the acoustic signal. The oven will then show the current time of day. The oven is switched off.


10.9.2 *Changing a cooking time*

- Touch the symbol .
  
- Press the symbol  (up) or  (down) to set the cooking time.
- Then confirm by pressing .

In the next step you will need to set the end of cooking time. Confirm the proposed end of cooking time to start the process immediately.

When you change the end of cooking time, you will also delay the start of the cooking procedure (this step will no longer need to be carried out when the cooking time is set during the cooking process).

- Confirm by pressing .

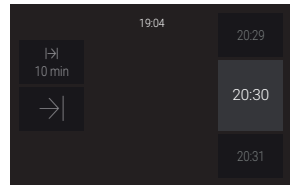

**INFO**


If you have deactivated the cooking time in a previous step, the cooking time will not need to be set.

You go back to the setting overview or to the running cooking process.

- Confirm by pressing .  
The oven carries out the cooking process with the new settings.



### INFO!

Once the programmed time has expired, the oven will switch off and an acoustic signal will sound. Press  to stop the acoustic signal.


The oven will then show the current time of day. The oven is switched off.





### 10.9.3 Deleting a cooking time

- Carry out the steps as described above and set the cooking time to "00:00".
- The oven continues the cooking process without a time setting and/or the time settings disappear in the setting overview.

### 10.9.4 Setting the final cooking time

The end of cooking time is the time at which the oven switches off.

Once you have set the cooking time and confirmed it with , it will be possible for you to set the end of cooking time.

- Press the symbol  (up) or  (down) to set the end of cooking time. Confirm by pressing .
  
- You will access the settings view.
- To confirm a setting, press .
  
- The display will have changed to the standby mode by the time the cooking process starts.



**INFO!**

The oven starts the process immediately after the suggested final cooking time is confirmed.

*10.9.5 Changing the end of cooking time*

- Touch the symbol .

Once you have set the cooking time and confirmed it with (see Cooking time setting), it will be possible for you to set the end of cooking time.

- Press the symbol (up) or (down) to set the end of cooking time. Confirm by pressing .

You will be returned to the settings view.

- To confirm a setting, press .


 
- The display will have changed to the standby mode by the time the cooking process starts.



**INFO!**





Once the programmed time has expired, the oven will switch off and an acoustic signal will sound. Press any key to stop the acoustic signal. The oven will then show the current time of day. The oven is switched off.

### 10.9.6 Deleting the end of cooking time

- Delete the end of cooking time by pressing the  symbol for 3 seconds.
- Confirm by pressing .

You will arrive at the standby screen.

### 10.9.7 Setting the timer

- Touch the symbol .
- Press the symbol  (up) or  (down) to set the desired time. Confirm by pressing .

After the programmed time has expired, a acoustic signal is emitted, and the [timer.png] symbol flashes in the status bar.

 



- Press  to stop the acoustic signal.



#### **INFO!**

This function is independent of the running cooking procedure.

### 10.9.8 Changing the timer

- Touch the symbol .
- Press the symbol  (up) or  (down) to set the desired time. Confirm by pressing .





You will access the settings view. If you set or change the timer during operation, you will be shown the process display.

After the programmed time has expired, a acoustic signal is emitted, and the symbol flashes in the status bar.

- Press  to stop the acoustic signal.

### 10.9.9 Deleting the timer

 





- Touch the symbol .
- Press the symbol (up) or (down) to set 00:00 and confirm by pressing .
- You go back to the initial screen.



#### INFO!

The timer setting does not depend on the cooking time and it has no influence on the cooking process.

### 10.10. Rapid heating (has been activated as of the factory setting)

- Touch the symbol  (rapid heating).
- Press the symbol  (up) or  (down) to set 00:00 in order to switch the rapid heating function on and off in the baking functions  permitted by the oven .
- Confirm by pressing .





Your setting will remain until you make another change.

### 11. Favourites

---


The oven is fitted with a memory function which makes it possible to save up to 20 programmes and cooking settings you have created yourself as a favourite.

#### 11.1. Calling up a favourite

- Touch the symbol  (Favourites)
  
- Press the symbol  (up) or  (down) to select the favourite.  
Confirm by pressing .





You will access the settings view. Now you can activate the rapid heating, the timer and the end of cooking time. (see chapters Rapid heating/ Setting the timer/ Selecting the end of cooking time.)

In addition, you can make changes to the programme or cooking settings.

- To confirm the settings, press .
- The oven will commence the cooking process.

#### 11.2. Saving favourites

In the settings overview and in the cooking procedure, you have the option of saving programmes and cooking settings as favourites.





- Press the  symbol to save a favourite.
  
- Press the symbol  (up) or  (down) to select a storage space (1–20).
- Confirm by pressing .

Please wait a moment, and then you will automatically go to the settings overview.

**INFO**

If you select an already assigned storage space, you overwrite the favourite stored in it.

### 11.3. Deleting favourites

 



- When in the Home display, hold the  symbol pressed for more than 3 seconds and you will go to the overview for deleting favourites.
- Press the symbol  (up) or  (down) to select the favourite.
- To confirm the delete procedure, press .

You will access the settings view.

## 12. Other functions

---



### 12.1. Setting the demo mode

- Now press the  and the  symbols for 3 seconds until an acoustic signal sounds and the  symbol appears in the status display.
- Deactivate the demo mode by holding the same combination of keys for 4 seconds until an acoustic signal sounds and the  symbol in the status display goes off.



### 12.2. Childproof lock

The childproof lock protects the oven against unwanted changes to the settings and offers additional protection for children. When the childproof lock is activated, the oven can only be turned off. The figures previously set may not be changed and the oven cannot be switched on.

### 12.2.1 Switching on the childproof lock:

- Press the  symbol for longer than 3 seconds until a long acoustic signal sounds and the symbol  appears. The keys and switches will now all be disabled.

### 12.2.2 Deactivating the childproof lock:

 





- Press the  symbol for longer than 4 seconds until a long acoustic signal sounds and the symbol  will go off.  
The keys and switches will now all be released again.



#### INFO

Pyrolytic ovens have a double protection system: when the childproof lock is activated, the door will also not open.

## 12.3. Factory settings


- Now keep the  and  symbols pressed for 3 seconds until the screen shown adjacent appears.
- Press the symbol  (up) or  (down) to select .
- Confirm by pressing .



Make the appliance current-free and then plug it again.






The appliance starts again.

Perhaps you have to re-adjust your language in the settings.





 
## 12.4. Automatic confirmation

With automatic confirmation , all set values are automatically adopted after 8 seconds (\*only applies to cooking parameters when you have already selected a cooking function or program).

- Hold the  and  symbols pressed in standby mode for longer than 3 seconds - until the screen shown at the side appears.

- Press the symbol  (up) or  (down) and then select automatic confirmation or  manual confirmation .
  - Confirm by pressing .
- You will return to the standby display.

## 12.5. ECO mode

- Press the  symbol.
- Press the symbol  (up) or  (down) to select the ECO tile.
- Confirm by pressing  or  to deactivate the ECO mode.







You will arrive at the Home screen.



### INFO











If ECO mode is active, no time is displayed in the standby screen.

## 12.6. Start-up tone settings

- Press the  symbol.
- Press the symbol  (up) or  (down) to select the Start-up one tile.
- Confirm by pressing .
- To activate the start-up tone, press , or press  to deactivate the start-up tone.

You will go back to the Home screen.

### 12.7. Unit settings

- Press the  symbol.
- Press the symbol  (up) or  (down) to select the Unit tile.
- Confirm by pressing .
  
- Press the symbol  (up) or  (down) to select the weight unit.
- Confirm by pressing .
  
- Press the symbol  (up) or  (down) to select the temperature unit.
- Confirm by pressing .

You will arrive at the Home screen.

## 13. Roasting thermometer

---

The roasting thermometer measures the temperature inside the food. As soon as the temperature determined by the thermometer has reached a certain value, the roast is as desired, i.e. not too dry or too raw, but rather "just right".

Cooking continues until the temperature inside the roast has reached the respective value. This is why it cannot be set. The duration can vary depending on meat size and type, cooking temperature, and selected operating mode.

 
The roasting thermometer can be used with all of the heating modes.

### Correctly inserting the roasting thermometer














- Insert the tip of the roasting thermometer horizontally from the side until it reaches the centre of the food item.
- Always insert the roasting thermometer up to the handle.
- The tip must not be located near the fat or the bone of the meat.

- For fowl, one must also ensure that the tip does not come into contact with a bone.

### Using the roasting thermometer

- Place the prepared roast with the roasting thermometer inserted in the oven.
- Insert the prong of the roast thermometer into the socket located at the upper left of the oven side wall.
- The  symbol appears in the status display when the thermometer is inserted.

### 13.1. Using the roast thermometer for cooking functions


- Select the  tile on the home screen.
- Then press the symbol  (up) or  (down) to select the cooking function.
- Confirm by pressing .
  
- Press the symbol  (up) or  (down) to select the function.
- Confirm by pressing .
  
- Press the symbol  (up) or  (down) to select the temperature for this cooking function.
- Confirm by pressing .
  
- Press the symbol  (up) or  (down) to set the core temperature.
- Confirm by pressing .

You will access the settings view.











- Confirm by pressing .

The oven will commence the cooking process.


As soon as the interior of the food item has reached the temperature you selected, the oven switches off.

If you wish to change the set temperature or the recommended temperature of the roast thermometer, press the  symbol. Then following the instructions above.

### 13.2. Using the roast thermometer for automatic programmes

- Select the  Programme tile on the home screen, then press the symbol  (up) or  (down) to select the category.
- Confirm by pressing .
  
- Press the symbol  (up) or  (down) to select the automatic programme.
- Confirm by pressing .
  
- Press the symbol  (up) or  (down) to set the desired temperature of the roasting thermometer.
- Confirm by pressing .

You will access the settings view.

- Confirm by pressing .

The oven will commence the cooking process.

As soon as the interior of the food item has reached the temperature you selected, the oven switches off.



#### INFO

The roasting thermometer cannot be used with all of the automatic programmes. When you select this programme, a tone is emitted, and the oven remains in the current screen.








## 14. Model-specific special settings and additional settings and functions

### 14.1. Pyrolytic function



#### NOTICE

Please remove all foreign objects from the oven before you start the pyrolytic process.

- Select the  tile (Pyrolysis) on the home screen.
  
- Press the symbol  (up) or  (down) to select the pyrolytic programme. Here you can select from three programmes which differ in cleaning time.
- Confirm by pressing . You will access the settings view.
  
- To confirm a setting, press .
  
- The oven will commence the cleaning process. The oven door will be automatically locked and will remain locked during the entire process for safety reasons. An acoustic signal is generated when the cleaning program has elapsed. Press any key to stop the acoustic signal.
- You will return to the standby display. The LOCK symbol in the status bar will remain visible until you are able to open the oven door again.


## 1. What to do if ...



**Repairs may only be carried out by qualified staff members!**

If your appliance is faulty, please check whether you can rectify the problem yourself by consulting these instructions for use. You may be able to rectify some problems yourself. They are described below.

| If ...  | What to do?  |
|---|--|
| ...the oven does not heat up  | Turn the oven on.  |
|   | Set the required time.   |
|   | Make sure that the settings are correct.   |
|   | You will find more relevant information in the section on "automatic switch-off".  |
|   | See "Using the childproof lock"  |
|   | Close the door carefully.  |
|   | Make sure that the safety fuse is causing the problem. Contact an authorised skilled electrician if the fuse repeatedly triggers.  |
| ... the lighting does not work  | Replace the lamp.  |
| ... neither sensors nor lighting function?  | Check: Has the mains plug been connected?<br>Is the fuse box in the building in an operational condition?<br>Power failure?<br>Childproof lock switched on?                      |
| ... when one or several of the sensors do not respond to touch, but the lights can be switched on | Wait approx. 15 seconds or trigger the fuse and switch it on again. You may need to repeat this procedure!<br>The keys then adjusted themselves, so they respond to touch again. |
| ... one or more sensors do not even respond when the fuse is triggered and switched on again      | Once the fuse has triggered twice and been switched on again, trigger it once more and inform Customer Service   |

| If ...   | What to do?  |
|--|--|
| ... the oven door glass cracked?   | Switch off the oven and have Customer Service replace it   |
| ... the door sealing is damaged?   | Replace the door sealing See «Replacing the door sealing».<br> <b>Do not use the oven when the door sealing is damaged!</b> |
| ... the door sealing is damaged?   | The oven can still be used. Replace the halogen lamp as quickly as possible when the oven is cold. See «Replacing the oven lamp».  |
| ...a powerful smell develops   | Recycle the ökotherm® catalyst. See «Recycle the ökotherm® catalyst».  |
| ... the display will show F111   | Insert the plug of the KT sensor as far as possible into the socket  |
| ... an error code which is not on the chart appears in the display                   | Switch the oven off and then on again using the safety fuse in the home or the safety switch in the fuse box.  |
|  | Contact Customer Service if the error code appears in the display again.   |
| ... steam and condensation water are deposited on food and in the inside of the oven | Do not allow food to remain in the oven for more than 15 - 20 minutes after the cooking or baking process has ended.   |



**ENERG**  
енергия · ενέργεια



Küppersbusch

**B6550.0**



A+++

A++

A+

A

B

C

D

**A+**



**70<sub>L</sub>**



**0.81** kWh/cycle\*



**0.68** kWh/cycle\*

\* цикл · cyclus · portion · zykus · πρόγραμμα · ciclo · tsúkkel · ohjelma · ciklus · ciklas · cikls · čiklu · cyclus · cykl · ciclu · program · cykel

**65/2014**


|                      |       |
|----------------------|-------|
| EEI <sub>cav</sub> * | 81    |
| N° cav *             | 1     |
| M                    | 33 kg |

\* затв.отдел. · ovnrúm · θαλάμου · prostor za pečenje · kavità · ovenruimte · incintă · prostor za peko · kavitet



**ENERG** Y UA  
енергия · ενεργεια IE IA

**Küppersbusch** **BP6550.0**  
**BP6570.0**

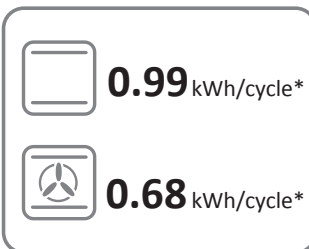

\* цикл · cyclus · portion · zyklus · πρόγραμμα · ciclo · tsükkel · ohjelma · ciklus · ciklas · cikls · čiklu · cyclus · cykl · ciclu · program · cykel

**65/2014**

|                      |       |
|----------------------|-------|
| EEl <sub>cav</sub> * | 81    |
| N° cav *             | 1     |
| M                    | 36 kg |


\* затв.отдел. · ovnrúm · θαλάμου · prostor za pečenje · kavitä · ovenruimte · incintă · prostor za peko · kavitet



**ENERG**  
енергия · ενέργεια



Küppersbusch **CBP6550.0**

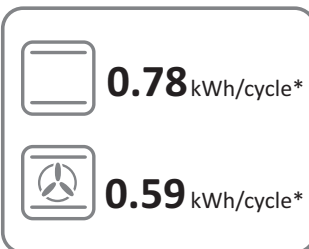

\* цикл · cyclus · portion · zykus · πρόγραμμα · ciclo · tsúkkel · ohjelma · ciklus · ciklas · cikls · čiklu · cyclus · cykl · ciclu · program · cykel

65/2014

|                      |       |
|----------------------|-------|
| EEI <sub>cav</sub> * | 81    |
| N° cav *             | 1     |
| M                    | 29 kg |

\* затв.отдел. · ovnrúm · θαλάμου · prostor za pečenje · kavità · ovenruimte · incintă · prostor za peko · kavitet





K01-180186/01

Cod. 3370696-04

# Küppersbusch

## **Küppersbusch Hausgeräte GmbH**

Postfach 10 01 32, D-45801 Gelsenkirchen,  
Küppersbuschstraße 16, D-45883 Gelsenkirchen  
Telefon: (0209) 401-0, Telefax: (0209) 401-303  
[www.kueppersbusch.de](http://www.kueppersbusch.de)

## **Teka Austria GmbH**

Eitnergasse 13, A-1230 Wien  
Telefon: (01) 86680-15, Telefax: (01) 86680-50  
[www.kueppersbusch.at](http://www.kueppersbusch.at)

